

Use & maintenance

- SC450

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual



1a. Switch off charger by unplug charger cable from red battery plug. Reconnect the red battery plug to the machine.



1b. Disconnect the battery charger cable from the electrical main.



2. Fill the tank with a clean water. The clean water temperature must not exceed 40 °C.



3. If the squeegee is not connected to the machine: install and fasten it with the handwheels, then connect to the suction hose



4. If the squeegee is in upper position, lower it with the lever



5. Place the brush or the pad-holder under the deck. Use the appropriate brush to clean the floor.



6. Adjust (if needed) the brush deck to have the correct machine directionality



7. Press the eco solution flow control valve



8. Switch on the brush and vac motors to activate the machine



9. Press the handle switch to engage the brush and run the machine



10. **At the end of the work.** Empty the recovery tank with the hose. Then empty the solution tank with the transparent hose



11. Wash with clean water the recovery tank and the vacuum grid



12. Remove the brush/pad and clean them



13. Take the squeegee off and remove debris.



14. Check and clean the squeegee blades



15. Clean the filter by: Remove the transparent cover and the gasket



16. Clean the machine using a damp cloth and where needed use a neutral cleaning product



17. Charge the batteries: Connect the battery charger cable from the electrical main



18. Park the machine with the recovery tank cover open

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.


PLEASE ENSURE RED SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Troubleshooting

- SC450


ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

The machine doesn't work as it should?

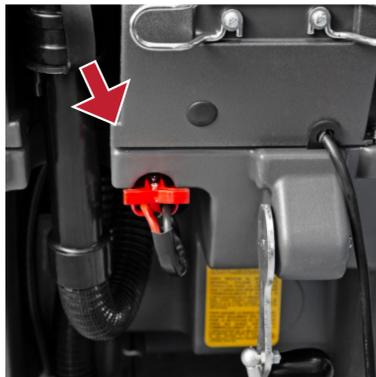

- 1 Check if the power cable is correctly connected.
- 2 Check if the battery is charged.

The suction doesn't work as it should?

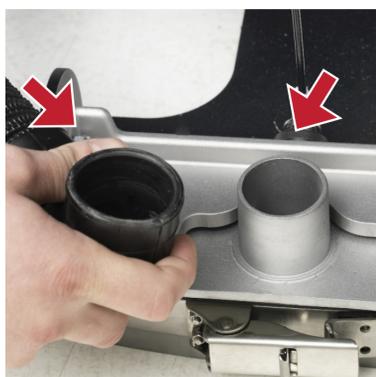


- 1 Check if the suction hose is correctly installed and cleaned.
- 2 Open the recovery tank and check if the vacuum grid and gasket are cleaned.
- 3 Check if squeegee blades are damaged or dirty.
- 4 Close the recovery tank cover properly and/or verify the gasket wear.

The machine doesn't clean as it should?



- 1 Check if you have the right water settings.
- 2 Check if the solution filter is cleaned.

The brush don't work as they should?

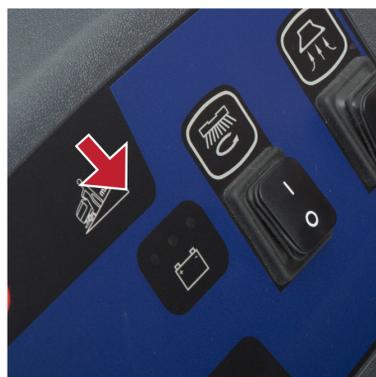

- 1 Check if the brush are correctly installed and not worn out.
- 2 Check if there isn't any brush motor overload i.e. 3 battery Ledsflash simultaneously.
- 3 Check if there are external materials avoiding brush rotating.